


SAFETY POSTER INSTRUCTIONS FOR THE SAFE HANDLING OF YOUR CUTTING TOOL

martor


SECUMAX 350




USAGE

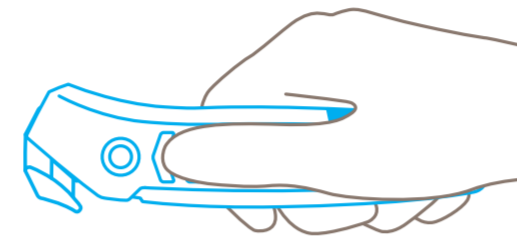


For the best possible grip, place your thumb on the **three ribs**. The soft-grip further limits the possibility of slipping.

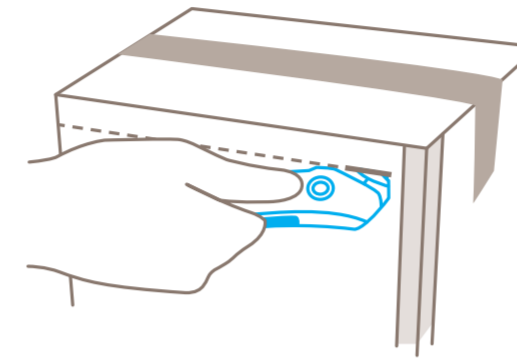

Use the nose of the cutter to **pierce** the cutting material. **Do not lever** against staples, nor force the nose into edge protectors!

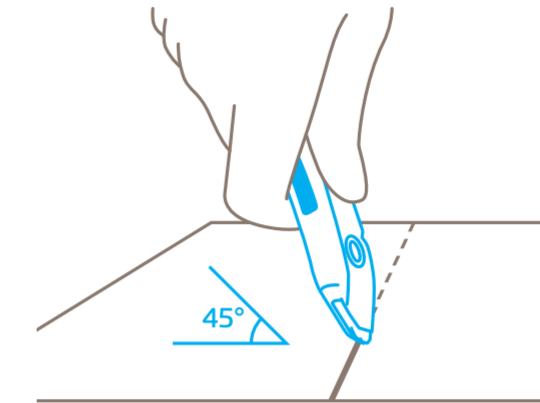

Hold the cutter at a **slight angle** when cutting through cardboard boxes.

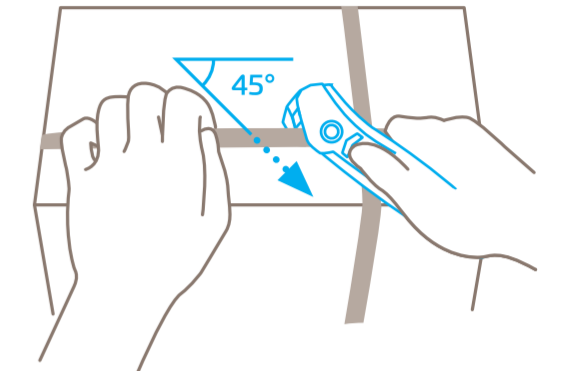

For best results, cut plastic strapping band **diagonally** (at a 45° angle).


BLADE CHANGE




Swing open the **blade magazine**. The fitted blade head will automatically disengage.



Remove the fitted blade from the head of the cutter. Now you can either **rotate or replace** the blade.

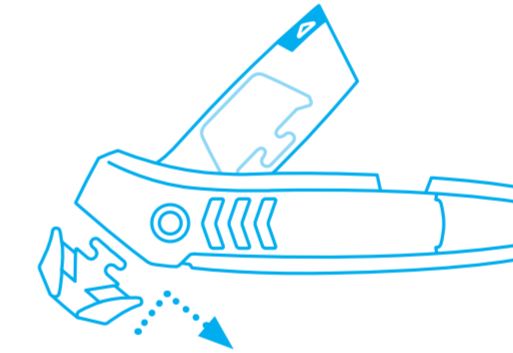


Position the spare blade **parallel** to the slanted side of the cutter head. Push the blade in, and then **downwards**, until fully engaged.

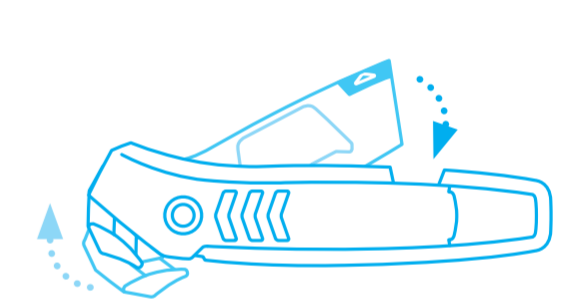


Push the blade magazine **back into the handle** to lock the blade head in place.

PROTECTION OF USER

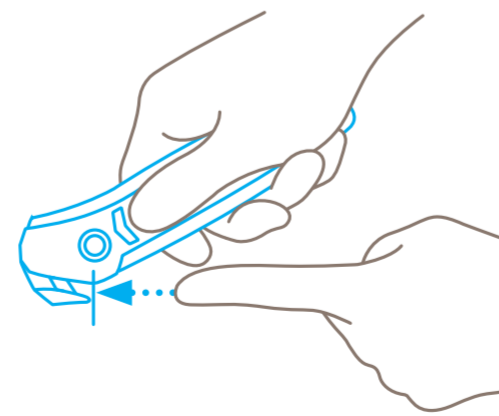


The concealed blade provides a maximum degree of **protection from cut injuries**.

PROTECTION OF GOODS

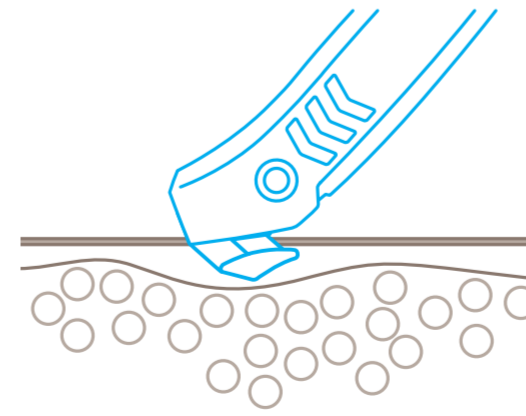


The concealed blade **will not get into contact with your goods** either.

DISPOSAL

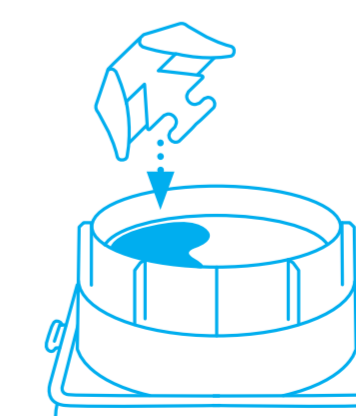

Dispose of the **used blade head** in either your **USED BLADE CONTAINER...**

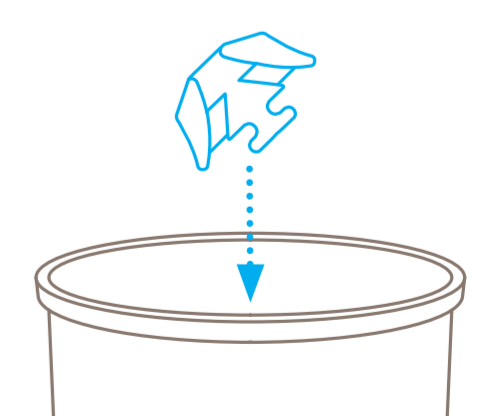

...or directly via your **general waste**.

Please note: To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.