

## SECUNORM 175

**Automatic blade retraction**  
for a high degree of safety

**Ergonomic handle**  
for greater efficiency

**Blade change button**  
for a safe and easy blade change




**Ribbed slider**  
for a better grip


**4-times usable blade**  
for longer durability

**Rounded handle end**  
protects the palm of  
your hand


### USAGE

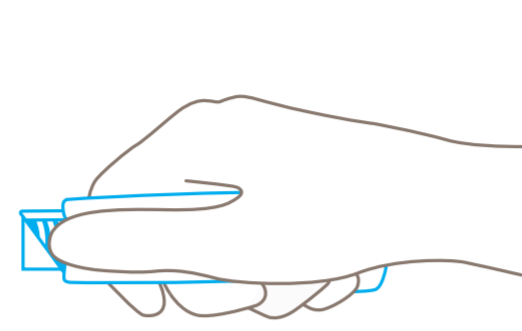


Use the slider to **engage the blade** for cutting.

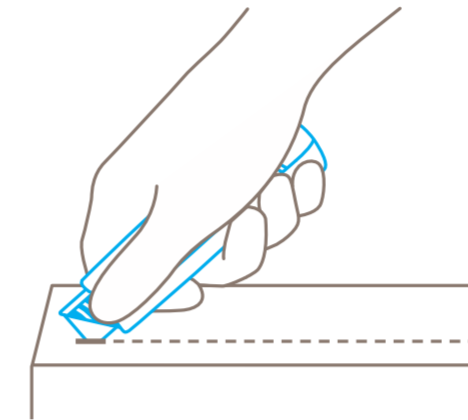

**Pierce** the cutting material to cut.

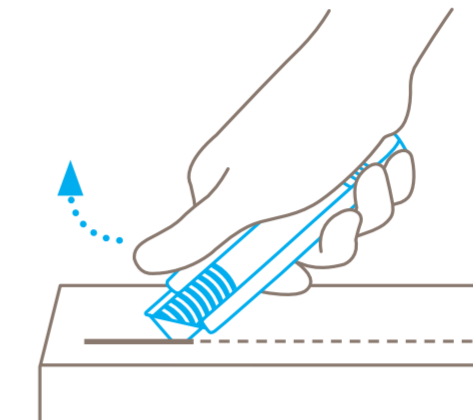


Remove your **thumb from the slider** to ensure automatic blade retraction.

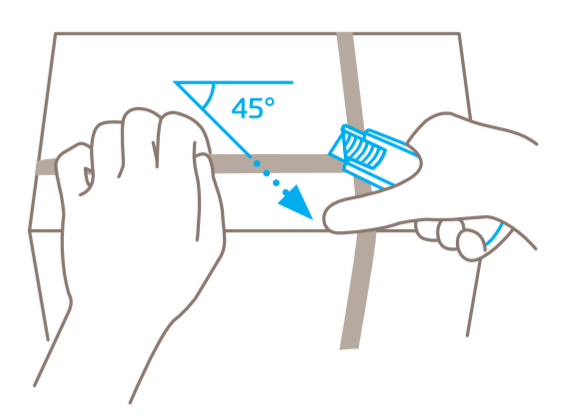


For best results, cut plastic strapping band **diagonally** (at a 45° angle).


### BLADE CHANGE

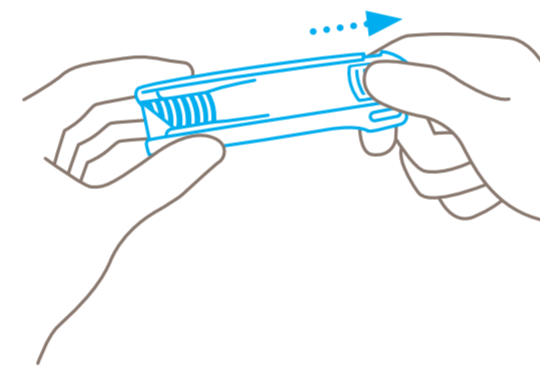


Press the blade-change button and **pull out the plastic insert**.

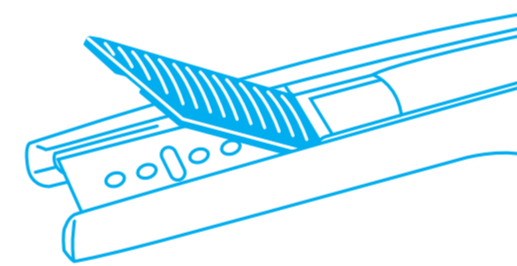

The blade cover opens **automatically**.

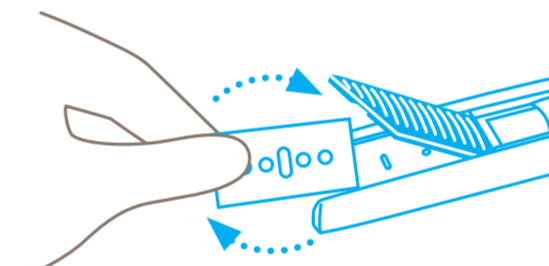


Now you can **turn or change** the blade.

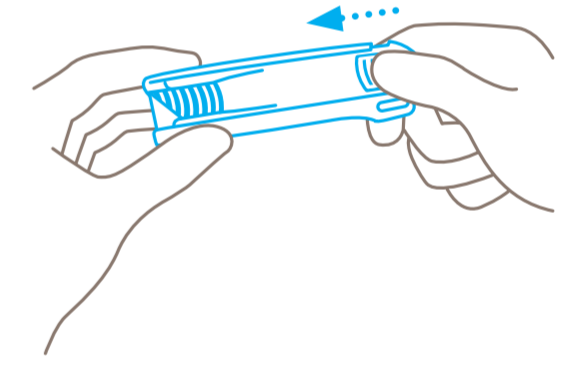


Finally, push the plastic insert back into the handle, until you **hear it click into place**.

### PROTECTION OF USER

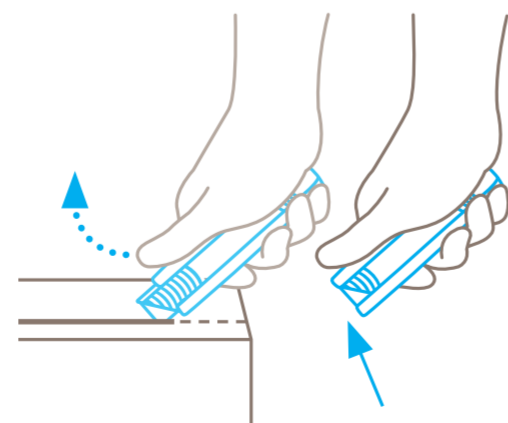


Following cutting, the blade immediately retracts into the handle. Condition: you have **released hold of the slider**.

### PROTECTION OF GOODS

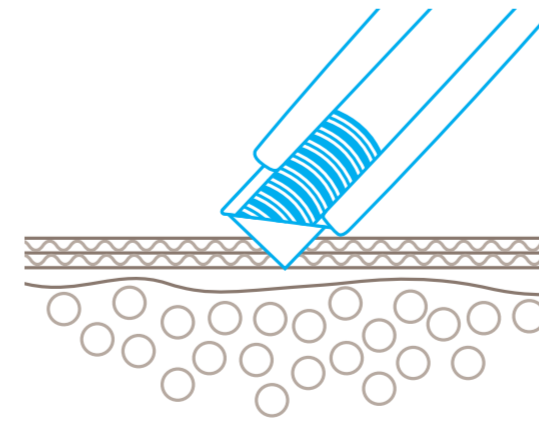


An appropriately **small cutting depth** serves to protect your goods.

### DISPOSAL

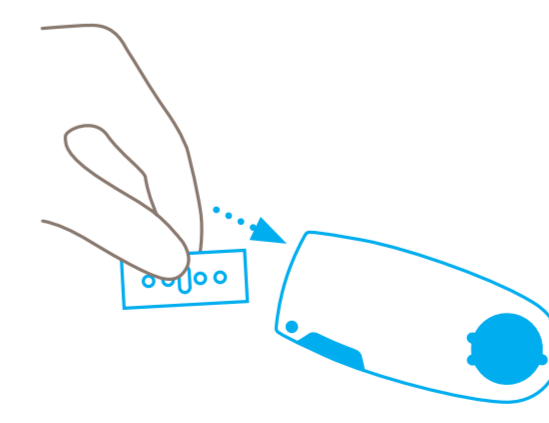

Your **SAFEBOX** is the best place to store **used blades**.

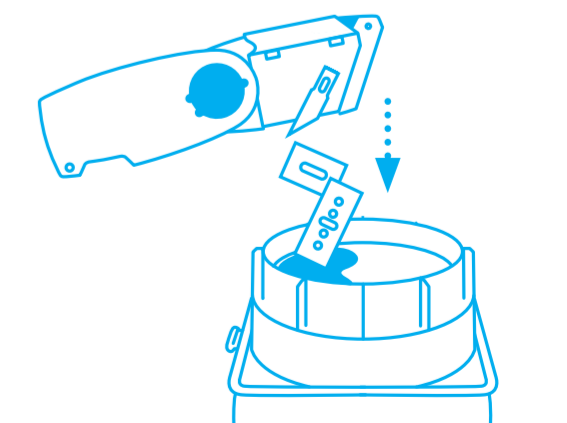

When the **SAFEBOX** is full, **empty all contents** into your **USED BLADE CONTAINER**.