



SAFETY POSTER INSTRUCTIONS FOR THE SAFE HANDLING OF YOUR CUTTING TOOL

martor


SECUMAX 370

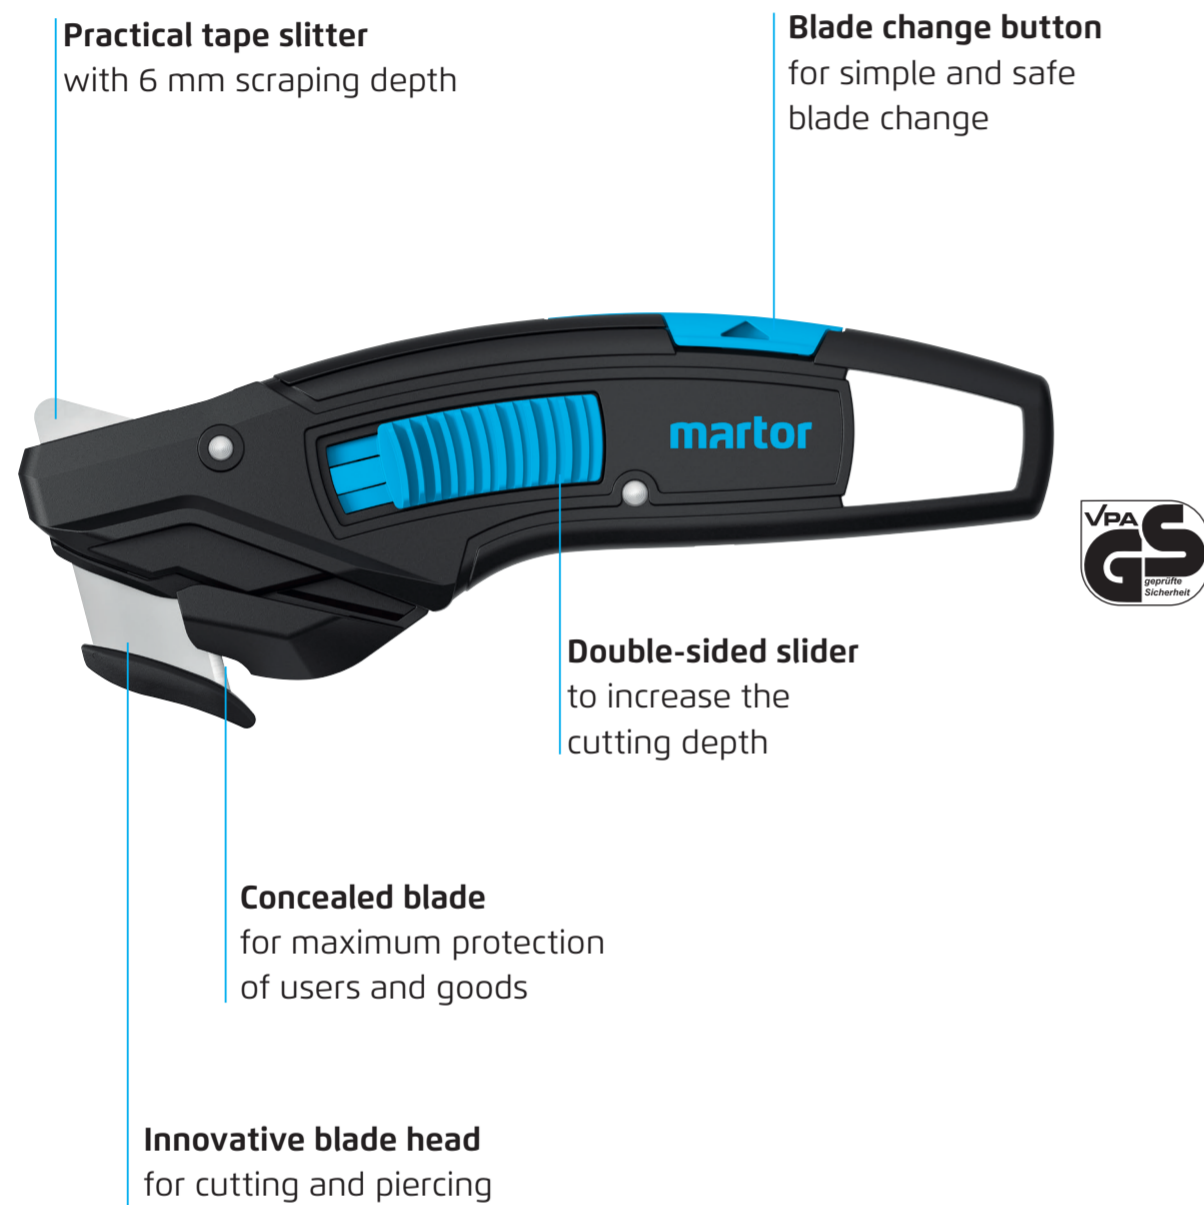


USAGE

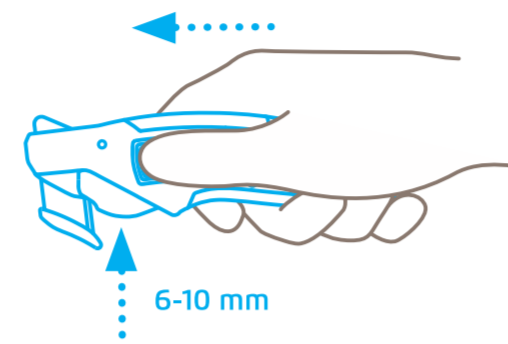


You can **extend** the cutting depth from **6 to 10 mm** by moving the slider.

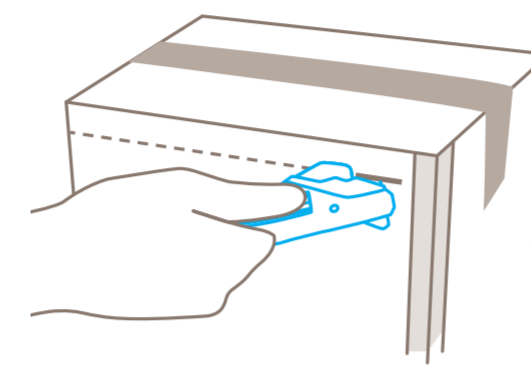

Use the nose of the cutter to **pierce** the cutting material. **Do not lever** against staples, nor force the nose into edge protectors!

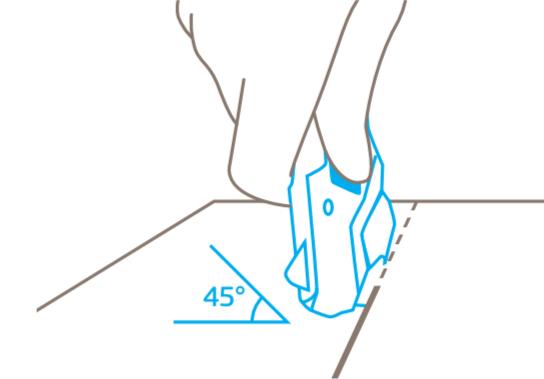


Hold the cutter at a **slight angle** when cutting up to 3-ply thick cardboard boxes.

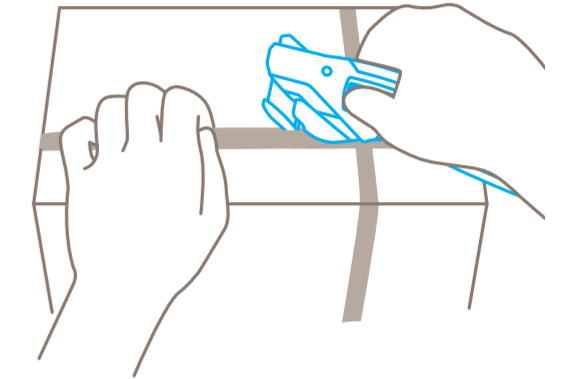


For best results, cut plastic strapping band **diagonally** (at a 45° angle).


BLADE CHANGE

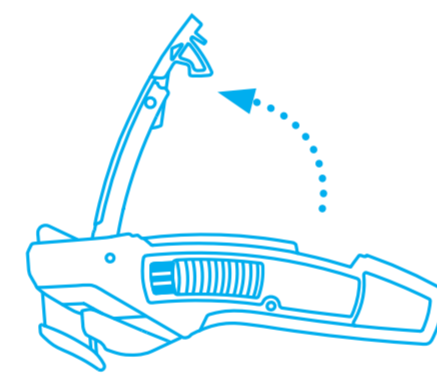


Fully open out the blade lock from the handle using the blade change button and **hold**.

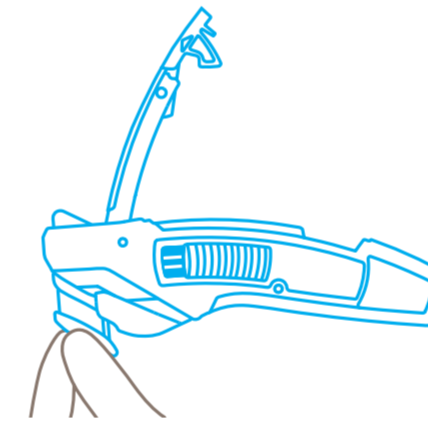

Pull the blade head out and **replace**.

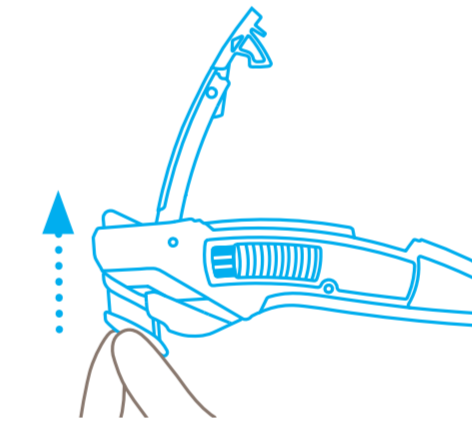


Do this by holding the blade head at right angles to the lower handle area. Then **press** the blade head into the slot **as far as it will go**.

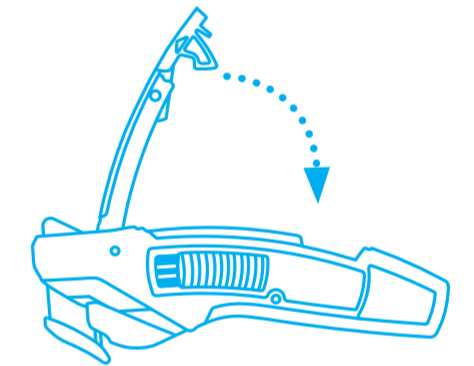


Fold the blade lock back into the handle letting the blade change button **audibly snap** into place.

PROTECTION OF USER

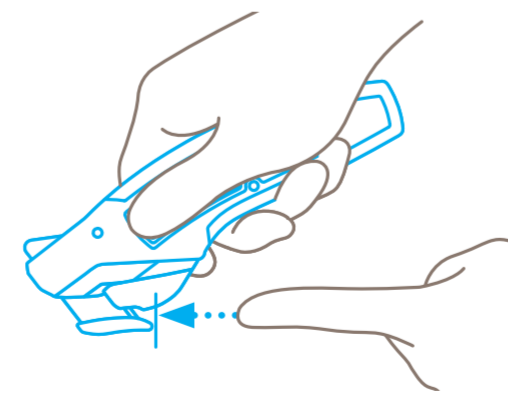


The concealed blade provides a maximum degree of **protection from cut injuries**.

PROTECTION OF GOODS

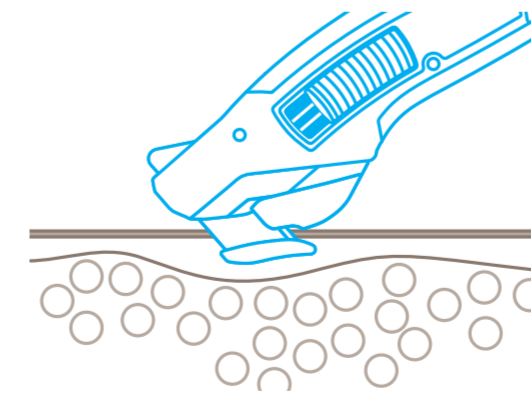


The concealed blade **will not get into contact with your goods** either.

DISPOSAL

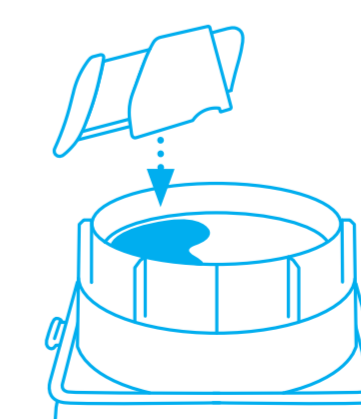

Dispose of the **used blade head** in either your **USED BLADE CONTAINER...**

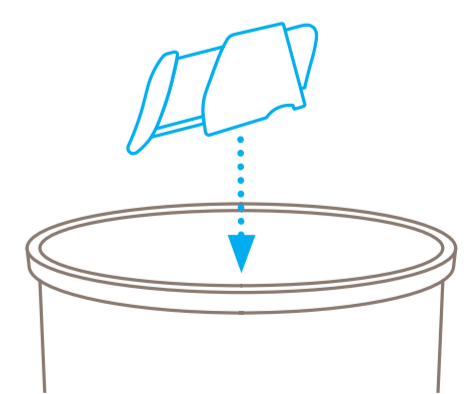

...or directly via your **general waste**.

Please note: To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.